

# **SIMPLE MENU TIP**

**To Return To "MAIN MENU" AT ANY  
TIME Without Having To Use  
Re-Set Button!**

- 1: Press The "START" Button (To Pause The Game),**
- 2: Press "SELECT" To Get To Selection Screen**
- 3: Select "MAIN MENU".**
- 4: Press "START" Again.**

***(SEE OTHER SIDE)***

# READ BEFORE USING!!!

## "SMART CIRCUITRY"

If, when first inserting the "ACTION 52" cartridge, you see the picture re-setting, this is the "ACTION 52" *smart circuitry* setting itself for your particular model or console.

It is Normal for the cartridge to re-set itself from 2 to 6 times before it settles.

If it does not set itself in the first 6 re-sets, merely hit the power button turning the console off then on again.